



Arrowhead Brass Push-Fitting Installation Instructions

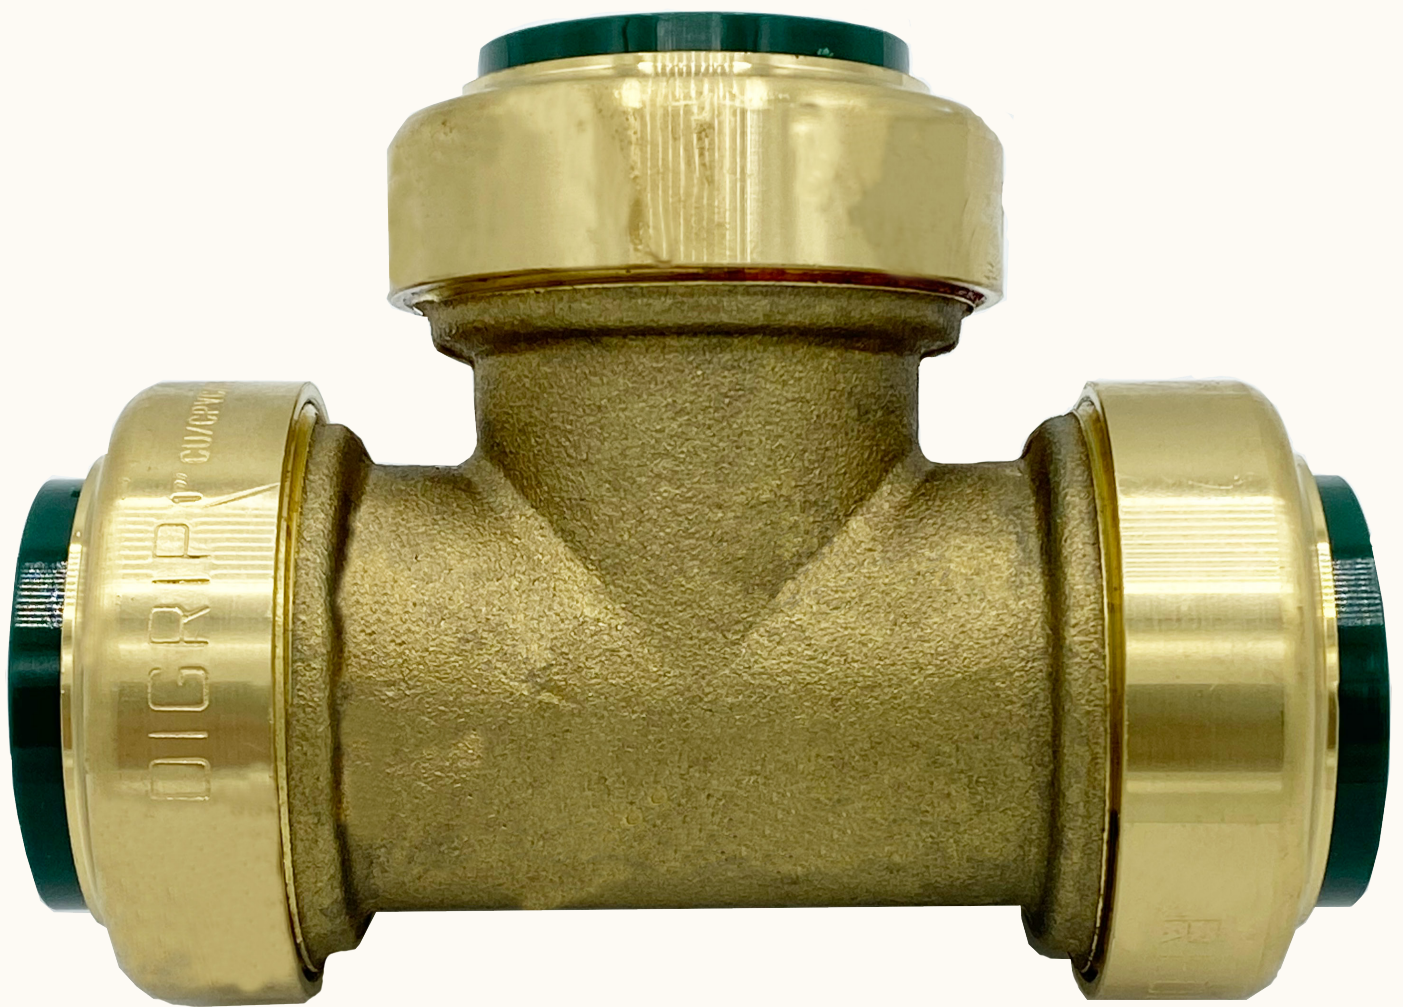




Push-Fitting Installation Instructions

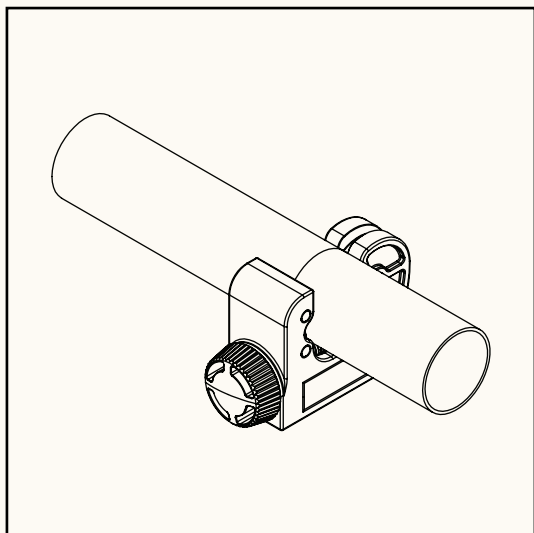


Step 1: make a clean, square cut with a pipe cutter and deburr the cut ends of the pipe to ensure a clean surface when inserting into the push-fitting.

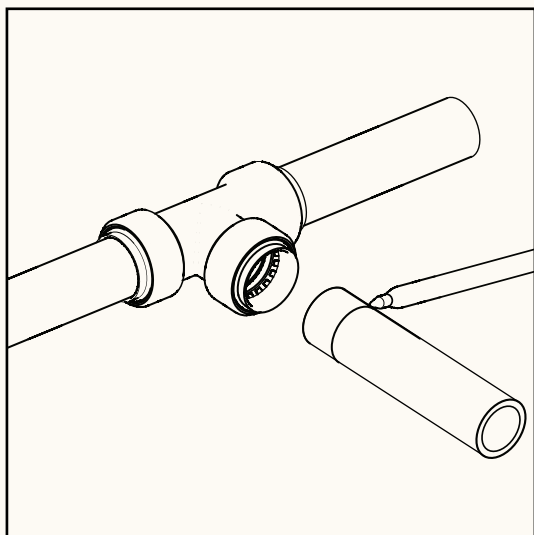


Step 2: mark the proper insertion depth on the pipe (see table below)

Pipe Size (CTS/Nominal)	Pipe Size (OD)	Insertion Depth
1/4"	3/8"	13/16"
3/8"	1/2"	15/16"
1/2"	5/8"	15/16"
3/4"	7/8"	1-1/8"
1"	1-1/8"	1-5/16"

Arrowhead Brass Push-Fitting Installation Guide

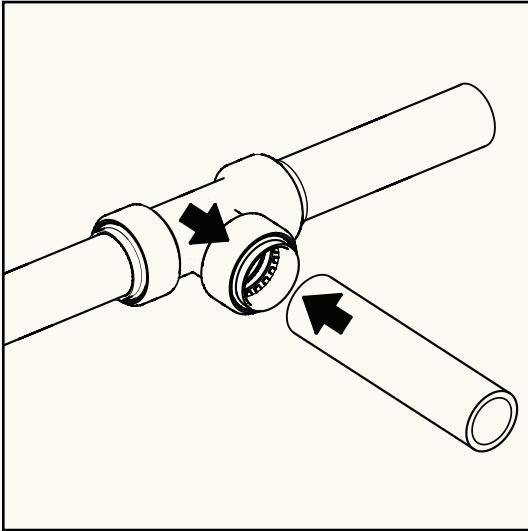

Step 3: insert the pipe into the Arrowhead Brass fitting and check the insertion depth mark.

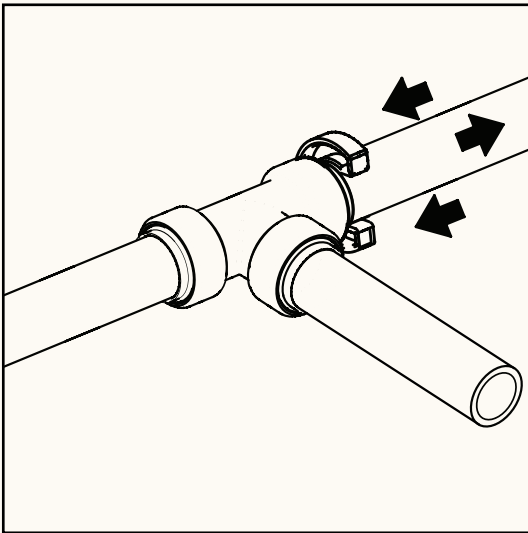

To disconnect Arrowhead Brass push-fittings place the push-fitting release tool against the push-fitting. Firmly push the release tool over the collar of the fitting (this will release the fitting). Pull the pipe out and remove the PEX insert if needed.